


M5 S-line Cash Drawer Pigtail

If you have previously used Epson printer to kick open cash drawer, then you should connect directly to our printer. Which is through a pigtail leading out from back of base unit.

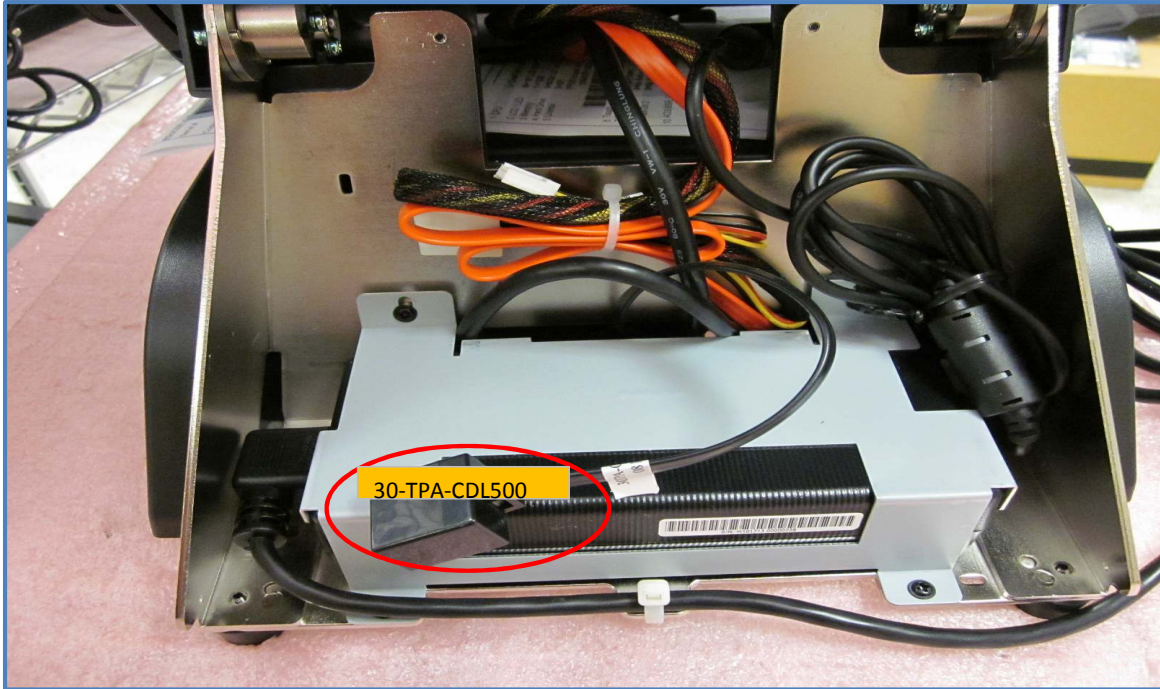

However, if you are using OPOS to open the cash drawer, then you need to connect to cash drawer port 1 or 2 on the I/O panel of M5, OPOs driver available for download on our website.