

Software (or Reseller) Name: **FutureFusion (Future POS)**


Hardware Type	Compatible Model (min. requirements)	Driver	PioneerPOS Suggested PN
All-in-one	15" LCD display, Celeron DC 2.13GHz, 2GB memory, built-in printer (USB), card reader track 1, 2.	Not required	M-Line: LM25YR000911 S-Sline: LM25YR000917
Printer	S-Line Printer (Serial) ST-EP4 Printer (Serial)	Windows driver (select printer from drop down menu after installed)	46B-TPA-EP01S C31CB10722
Card Reader	USB KBD wedge	Not required	46B-U32000 46B-D21000
Customer Display/ Pole Display/ Line Display	Aedex Emulation	Not required	46B-RCRJ-ADX
Cash drawer	Epson printer compatible	Printer driven (select installed printer driver from drop-down menu)	49-CDR400J

Printer Setup (S-Line or ST-EP4 Serial)


1. Open the Future Fusion Back Office program and login with the proper credentials
2. Click on the Settings icon and under **General Settings**, double click **System Devices**
3. Click on the **Terminals** tab and click the right arrow at the top right corner to scroll through the options. Click on the **Receipt Printer** tab. For **Printer Type**, select **Epson TM-T88 Serial** and select the right COM port (COM1 by default)

(Screenshots on next page)

2.

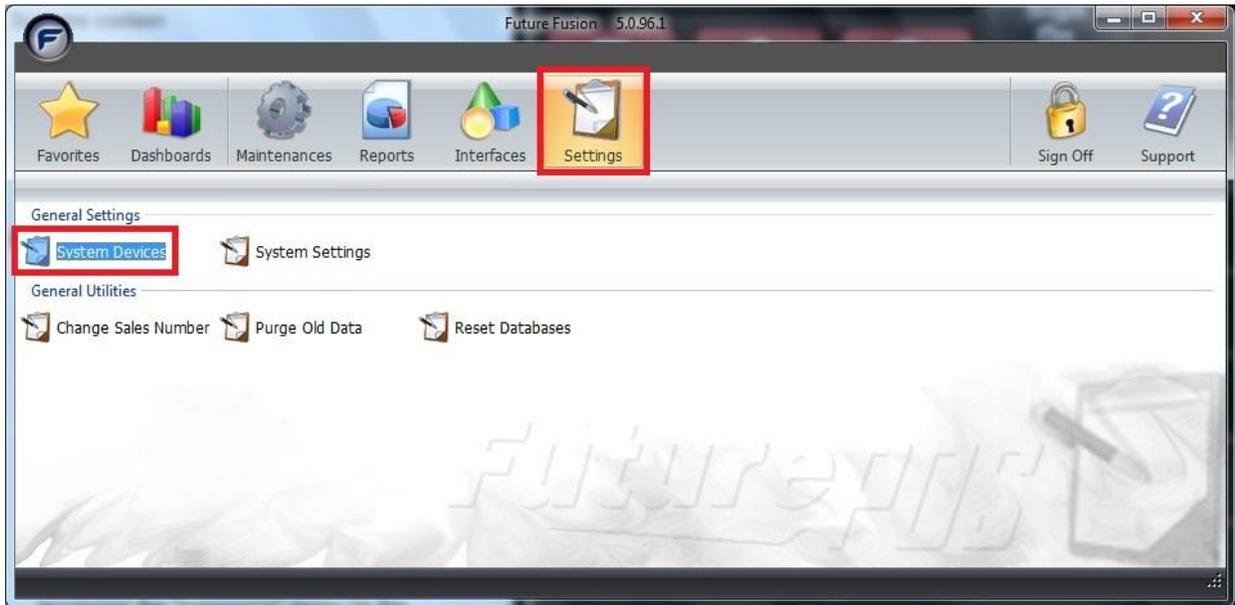


3.

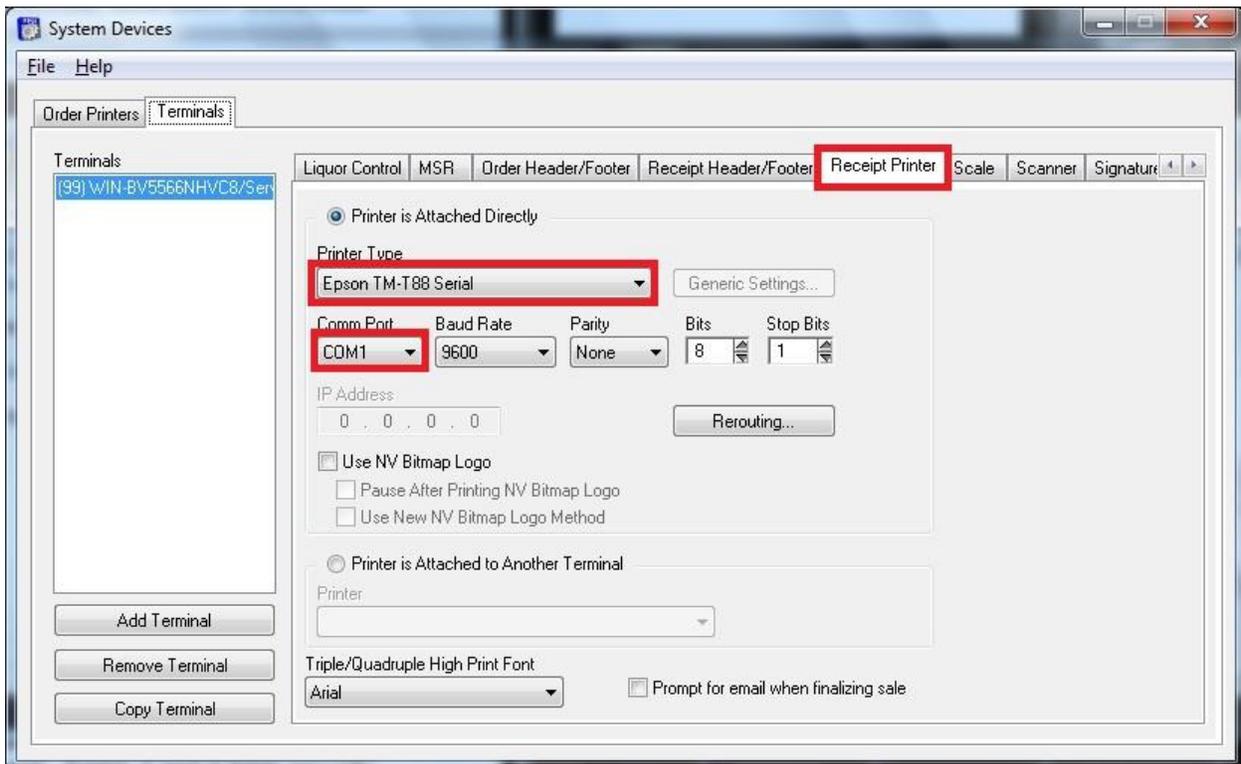

Cash Drawer Setup

1. Go to the **Cashdrawers** tab and set the **Drawer Type** to **Printer**. Then, set the **Drawer Printer** to **Receipt Printer**. This will allow the printer to control the cashdrawer.

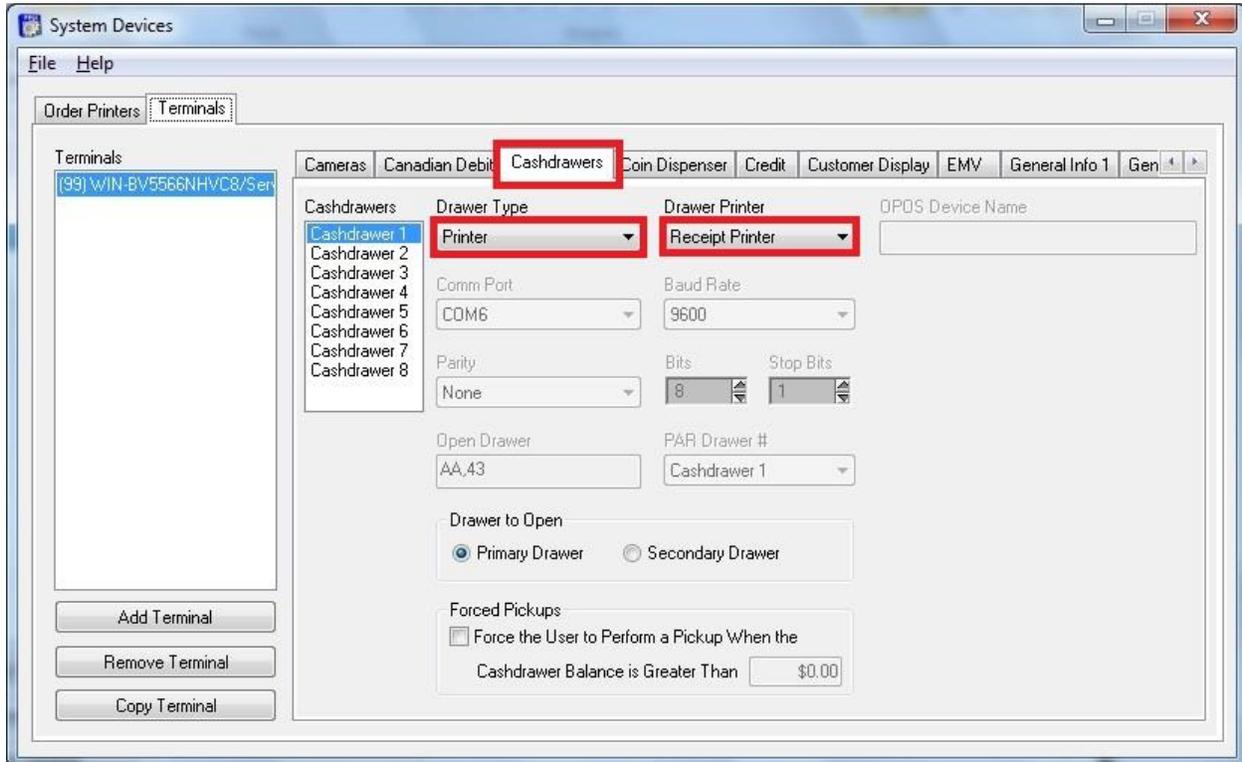

Customer Display

1. Under **Terminals** click on the **Customer Display** tab and for **Display Type**, select **Aedex Serial** and select the COM port corresponding to where the customer display is plugged in.

(Screenshot on next page)

