


Software (or Reseller) Name: **RetailEdge (RetailEdge)**

Hardware Type	Compatible Model (min. requirements)	Driver	PioneerPOS Suggested PN
All-in-one	15" LCD display, AtomDC 2.13GHz, 2GB memory, built-in printer (USB), card reader track 1, 2.	Not required	M-Line: GM25YR000911 S-Sline: GM25YR000918
Printer	S-Line Printer (Serial) ST-EP4 Printer (Serial)	Windows Driver	46B-TPA-EP01S C31CB10722
Card Reader	USB KBD wedge	Not required	46B-U32000 46B-D21000
Customer Display/ Pole Display/ Line Display	PD3000	Not required	46B-RCRJ-PD3
Cash drawer	Any Serial Interface Drawer	Not required	N/A

*****Note:** You must have a desktop printer that can print full 8.5" x 11" pages attached to the main workstation for these settings to work properly. To set it up, navigate to **Tools → Settings → Workstations → Main / Register 1 → Reports** and select a desktop printer that can print full pages. End result should look like below (Generic Printer used in example)***

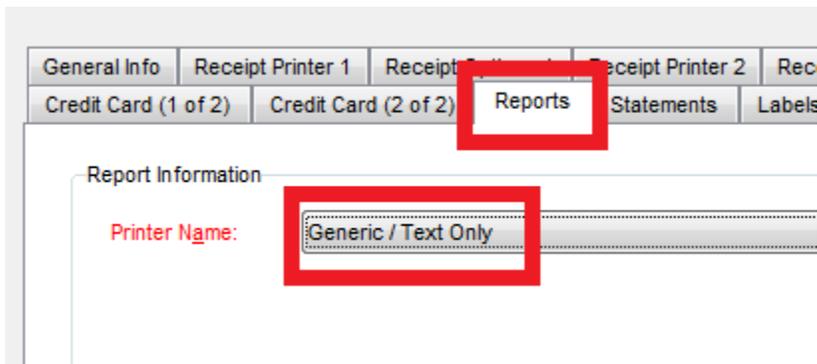


The screenshot shows a configuration window with a tabbed interface. The 'Reports' tab is selected and highlighted with a red box. Below the tabs, under 'Report Information', the 'Printer Name' field is set to 'Generic / Text Only' and is also highlighted with a red box.


Printer Setup (S-Line or ST-EP4 Serial)

Note: The S-Line or ST-EP4 printer Windows drivers must be installed before proceeding. Please refer to the respective printer installation guides for more information.


1. Open RetailEdge and click on **Tools** → **Settings** → **Workstations**

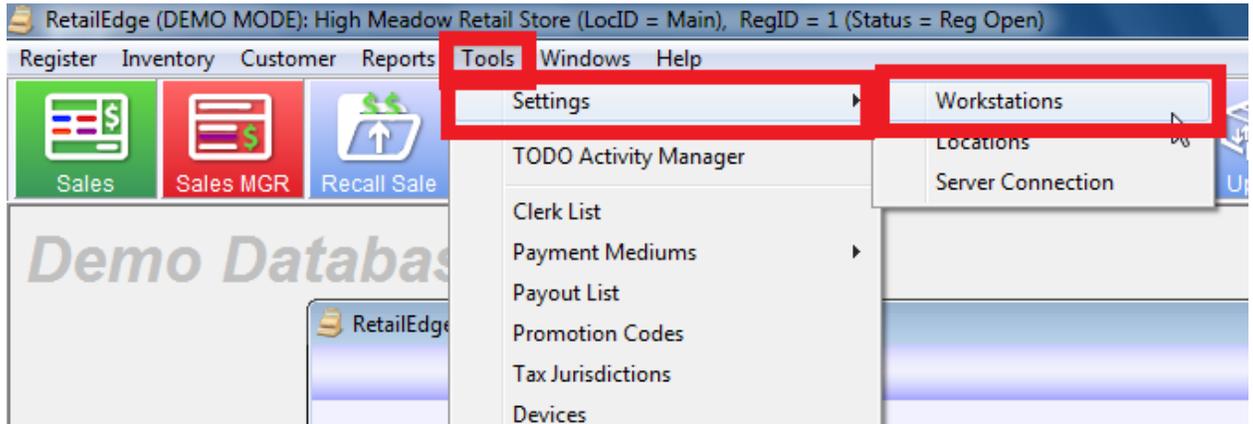

2. In the Workstations List, click on **Main / Register 1** and click **Modify**

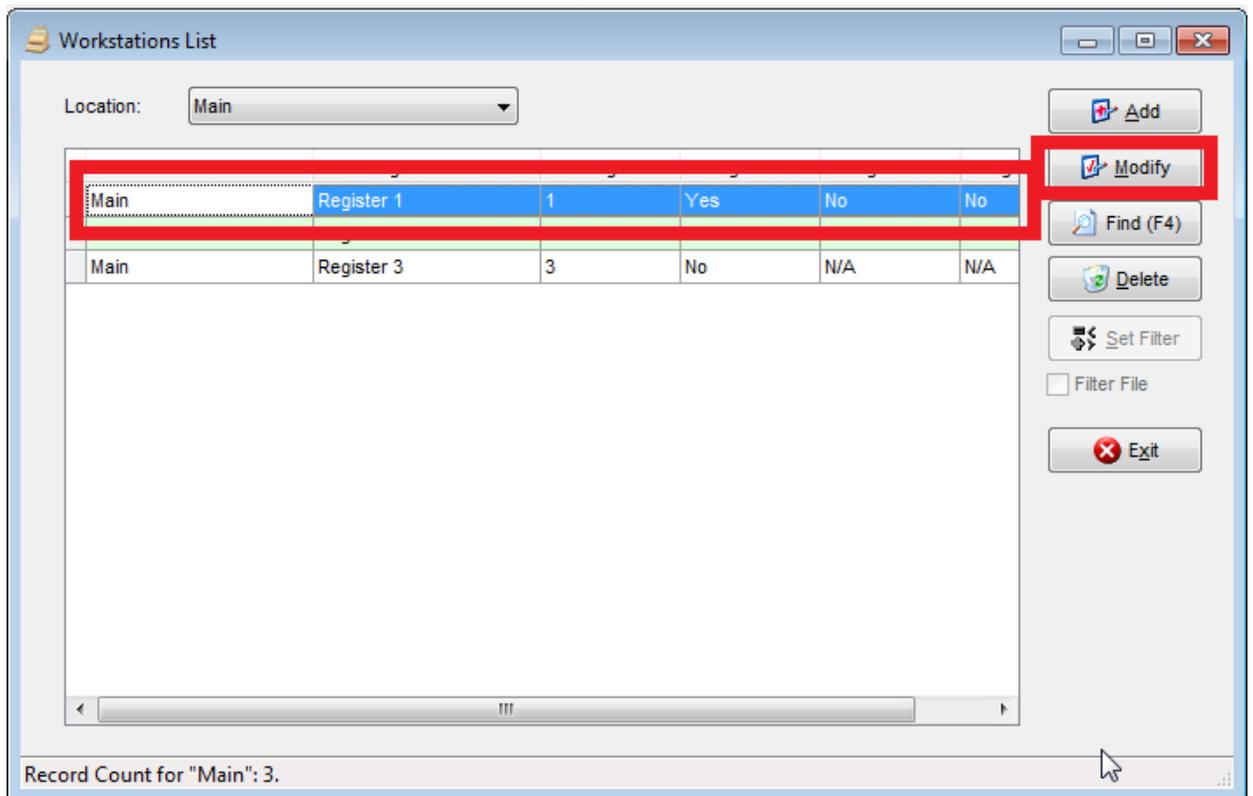

3. Go to the **Receipt Printer 1** tab and choose **Tape Style – Serial Via Windows Printer Driver**. Choose the appropriate Printer and Device Name.

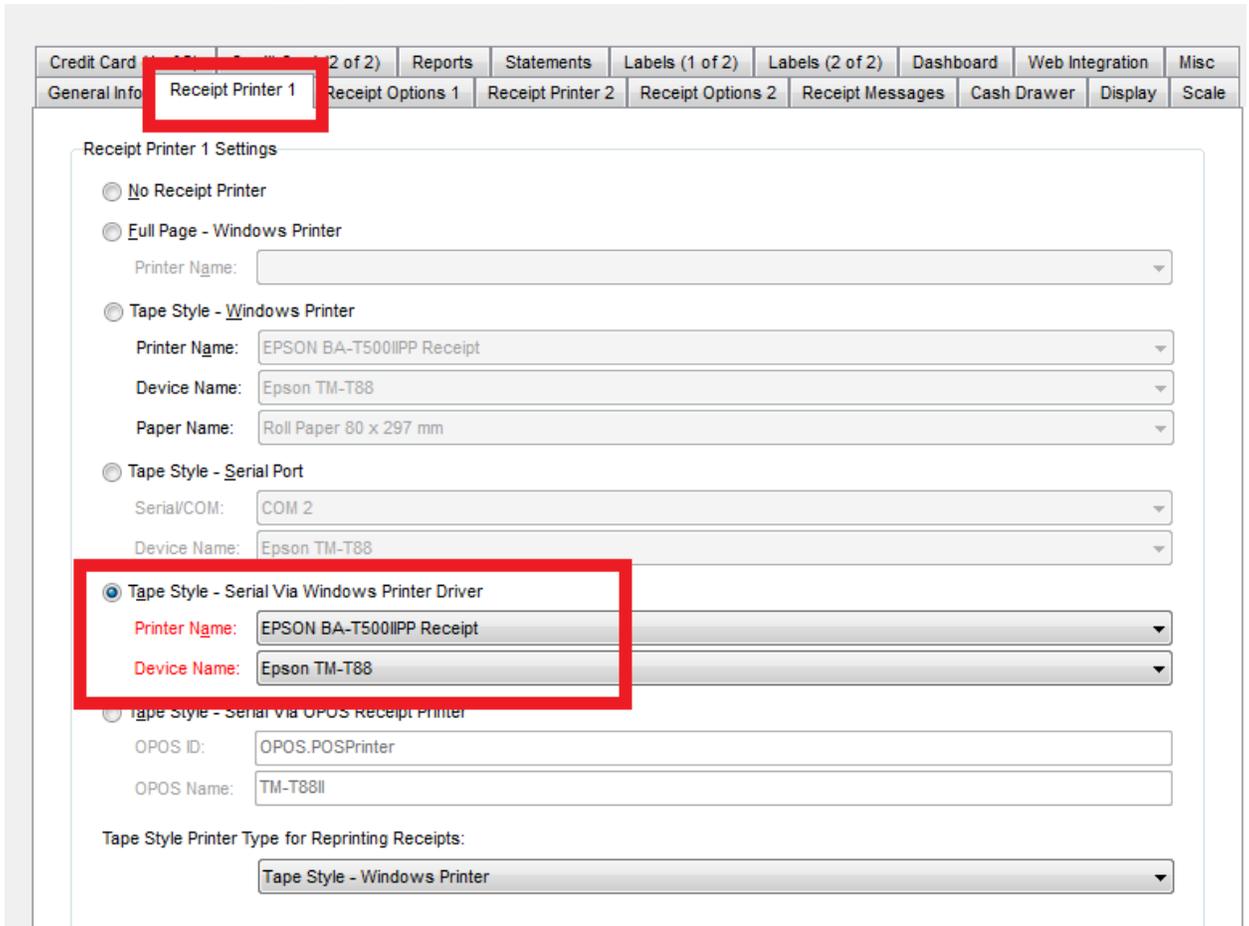

The screenshot displays the configuration interface for Receipt Printer 1. The 'Receipt Printer 1' tab is selected and highlighted with a red box. The 'Tape Style - Serial Via Windows Printer Driver' option is selected and highlighted with a red box. The 'Printer Name' is set to 'EPSON BA-T500IIPP Receipt' and the 'Device Name' is set to 'Epson TM-T88'.

Credit Card	Receipt Printer 1	Receipt Options 1	Receipt Printer 2	Receipt Options 2	Receipt Messages	Cash Drawer	Display	Scale
General Info	Receipt Printer 1	Receipt Options 1	Receipt Printer 2	Receipt Options 2	Receipt Messages	Cash Drawer	Display	Scale

Receipt Printer 1 Settings

No Receipt Printer

Full Page - Windows Printer
Printer Name:

Tape Style - Windows Printer
Printer Name:
Device Name:
Paper Name:

Tape Style - Serial Port
Serial/COM:
Device Name:

Tape Style - Serial Via Windows Printer Driver
Printer Name:
Device Name:

Tape Style - Serial via OPOS Receipt Printer
OPOS ID:
OPOS Name:

Tape Style Printer Type for Reprinting Receipts:

Cash Drawer and Customer Display Setup

1. Go to the **Cash Drawer** tab and choose **Driven by Receipt Printer**




Credit Card (1 of 2) | Credit Card (2 of 2) | Reports | Statements | Labels (1 of 2) | Labels (2 of 2) | Dashboard | Web Integration | Misc
General Info | Receipt Printer 1 | Receipt Options 1 | Receipt Printer 2 | Receipt Options 2 | Receipt Messages | **Cash Drawer** | Display | Scale

Cash Drawer Settings

Driven by Receipt Printer
 Serial Port

2. Go to the **Display** tab and select the appropriate COM port (4 in example below). Choose **Logic Controls – PD3000 Pole**

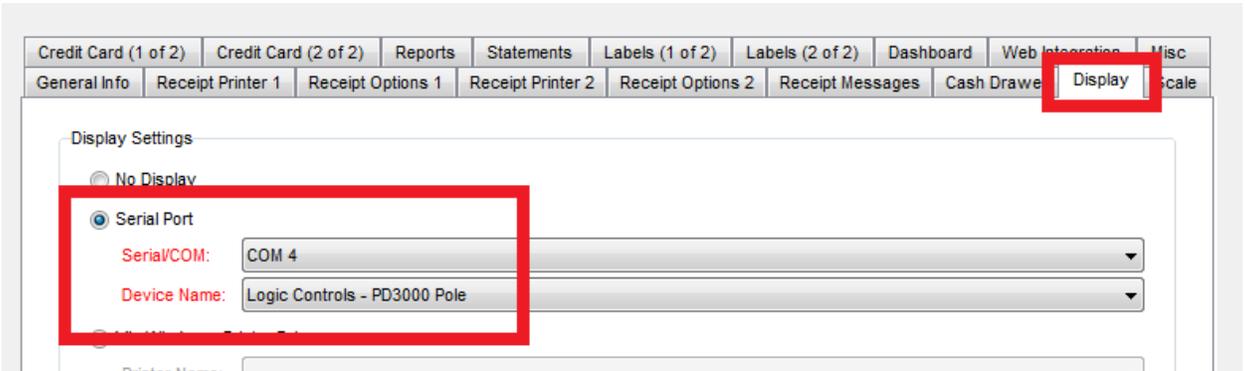

Credit Card (1 of 2) | Credit Card (2 of 2) | Reports | Statements | Labels (1 of 2) | Labels (2 of 2) | Dashboard | Web Integration | Misc
General Info | Receipt Printer 1 | Receipt Options 1 | Receipt Printer 2 | Receipt Options 2 | Receipt Messages | Cash Drawer | **Display** | Scale

Display Settings

No Display
 Serial Port

Serial/COM: COM 4
Device Name: Logic Controls - PD3000 Pole

Click on the Save button to save your changes.

